


# SHOWCASE WITH FRONT PLEXIGLASS

Showcase with front plexiglass. Main purpose of showcase is to use it as a static device/platform. It must stand on a level and firm surface. Before use, please remove the protective foil. When removing the pedestal, device can be hanged.

The procedure for wall-mounting:

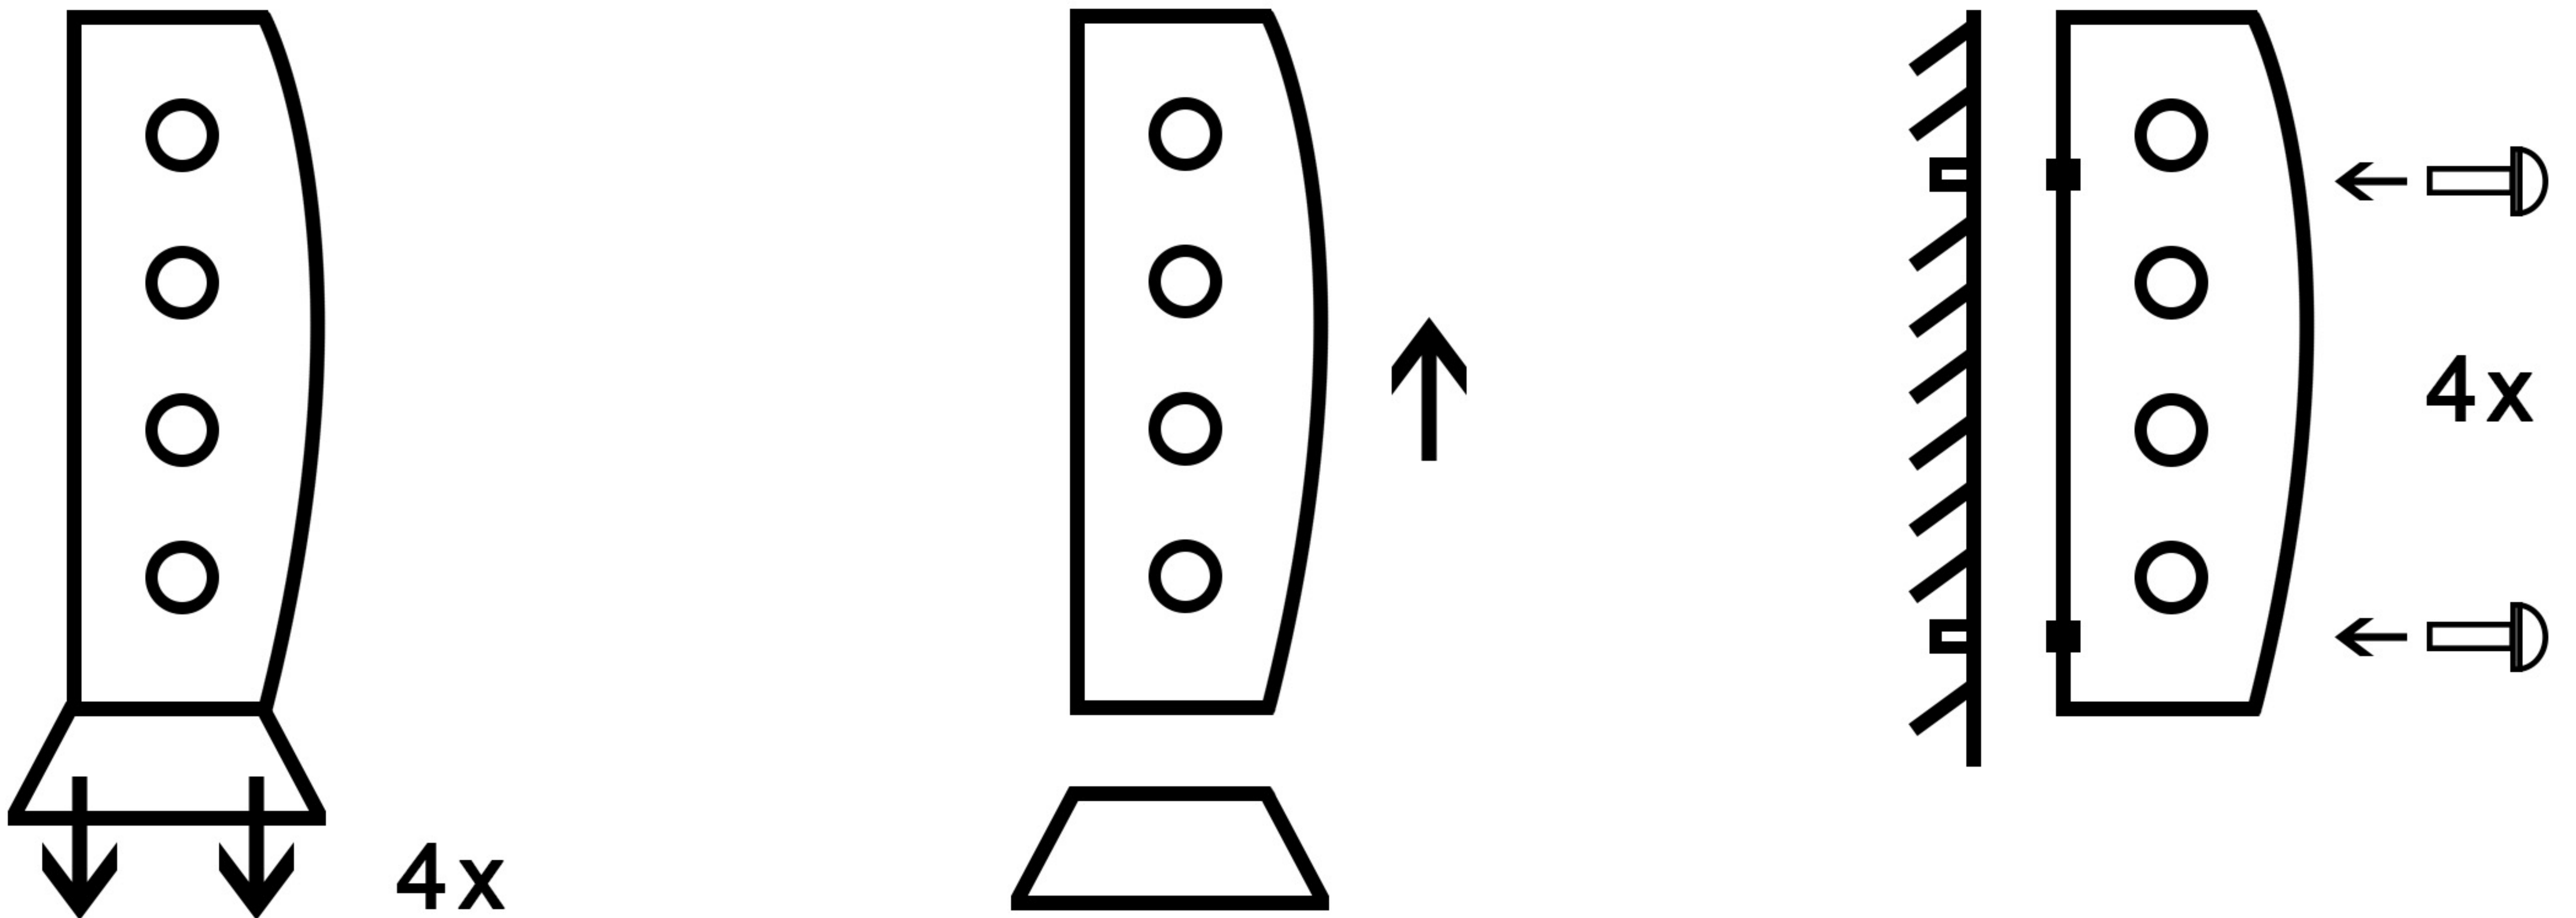


1)  
Unscrew 4 screws from the bottom of the pedestal.

2)  
Separate the pedestal from the main part.

3)  
Select the appropriate mounting components which fits the wall material. Then use 4 holes on the backside of the showcase to attach device to the wall.

Opening and removing the front plexiglass:

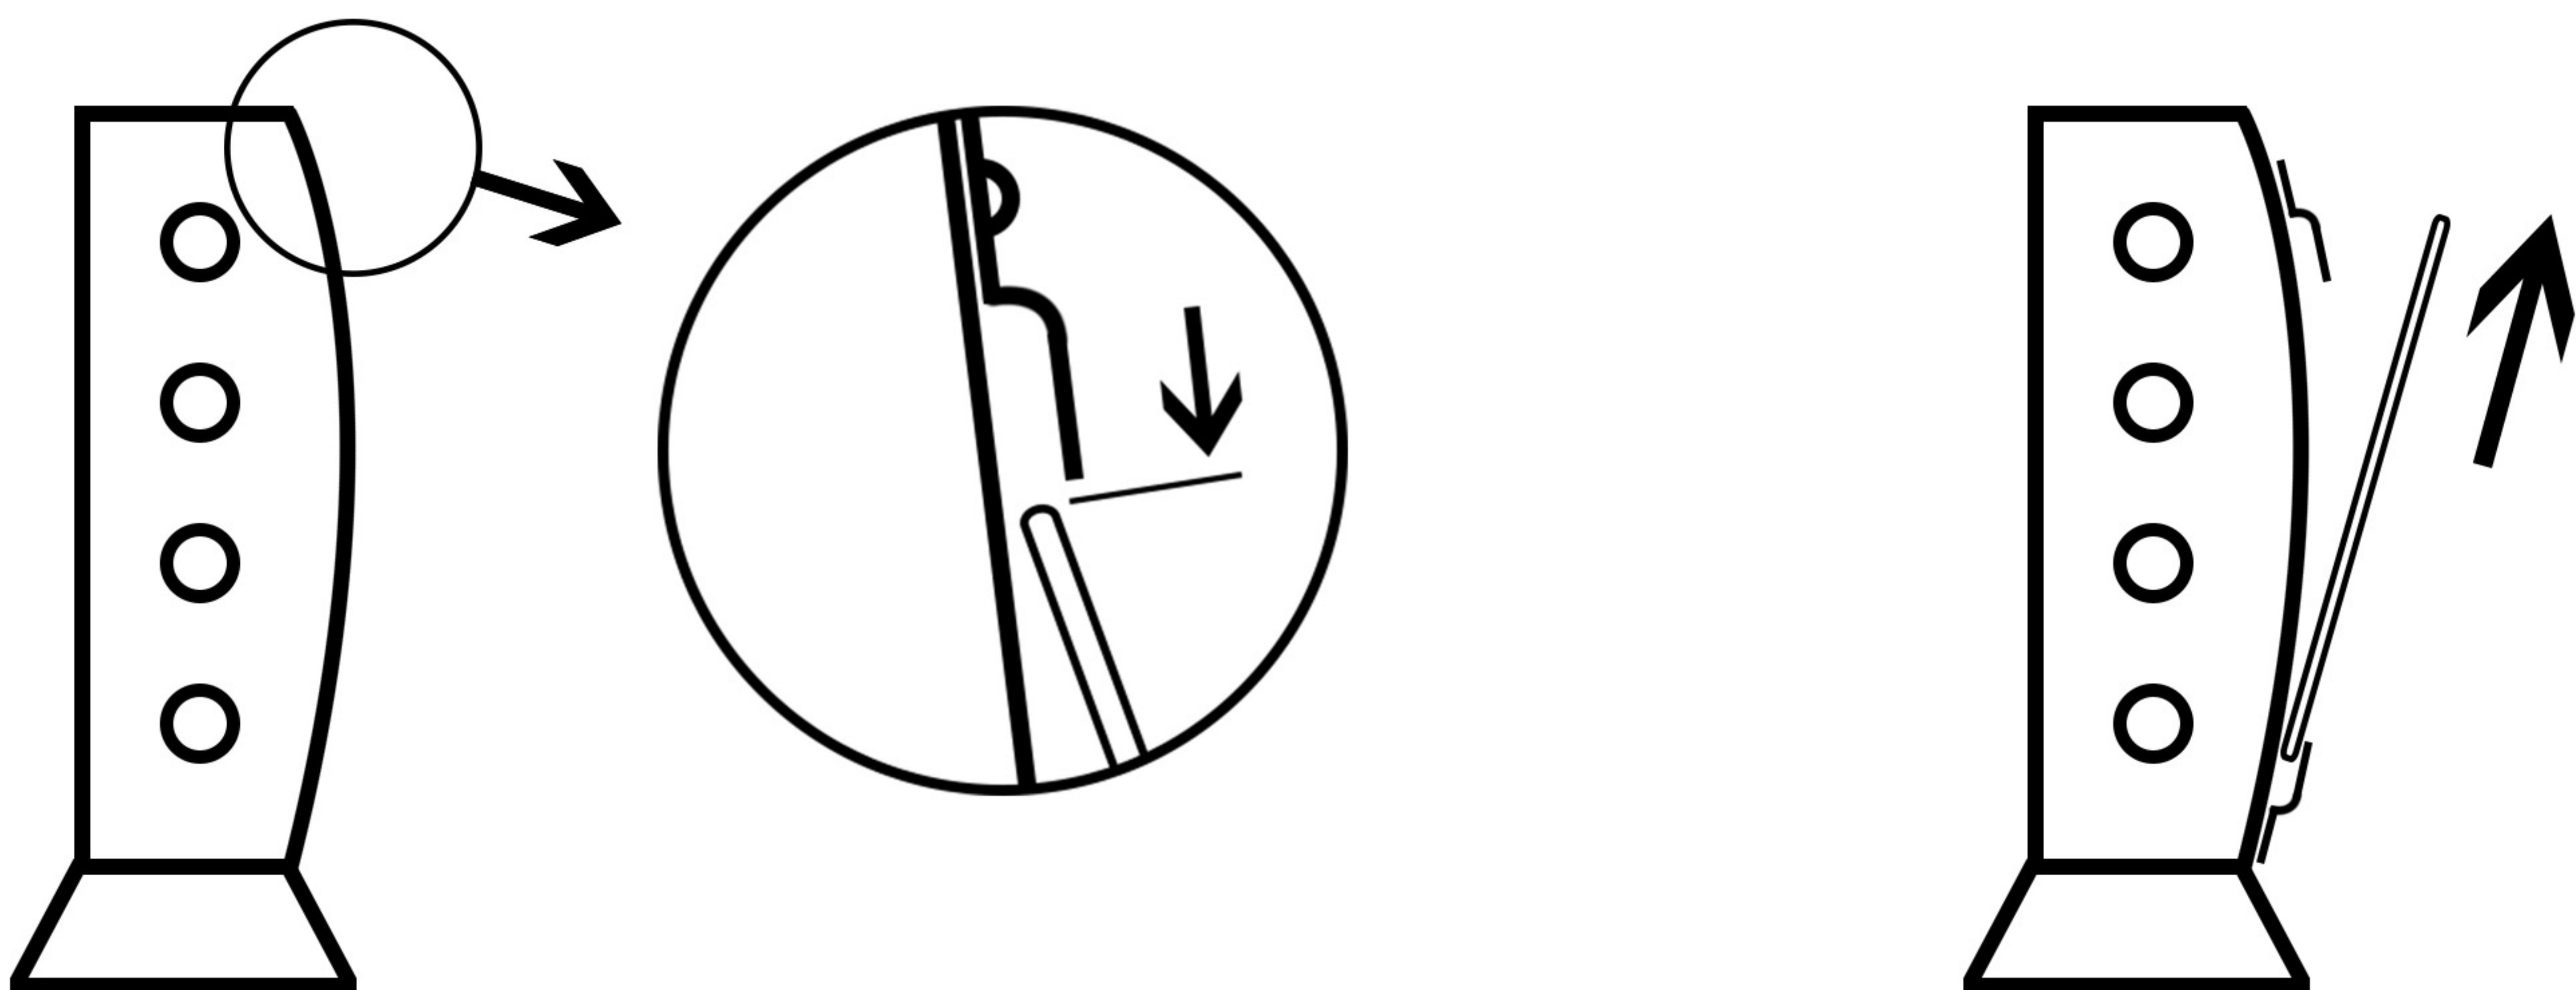

1)  
Press both sides of the top edge of the plexiglass.

2)  
Pull up to remove plexiglass.

## **Warning!**

To avoid any damage to plexiglass, please avoid any contact with sharp objects. To clean the plexiglass, use only the designated cleaning agents. In another case there is a risk of damage to the plexiglass surface.